


*Thank you for purchasing this Autel tool. Our tools are manufactured to a high standard and — when used according to these instructions and properly maintained — will provide years of trouble-free performance.*

### Getting Started



**IMPORTANT:** Before operating or maintaining this unit, please read these instructions carefully, paying extra attention to the safety warnings and precautions. Failure to use this product properly may cause damage and/or personal injury and will void the product warranty.

1

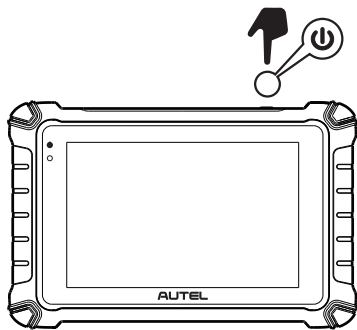


- Press and hold the **Power/Lock** button to turn on the tablet. Ensure the tablet has a charged battery or is connected to power supply using the supplied power adapter and USB Type-C cable.

2




- Scan the above QR code to visit our website at **pro.autel.com**.
- Create an Autel ID and register the product with its serial number and password.

3

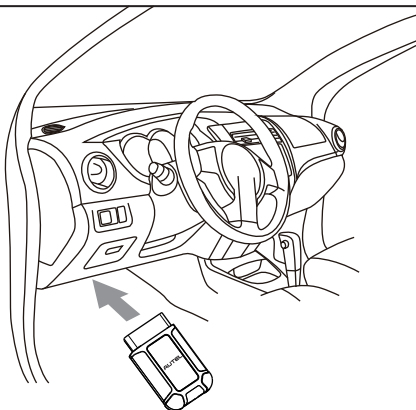

- Insert the MaxiVCI V150 into the vehicle's DLC, which is generally located under the vehicle dashboard.

4

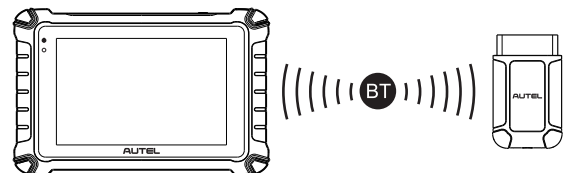

- Connect the tablet to the MaxiVCI V150 via Bluetooth to establish a communication link.
- When the MaxiVCI V150 is properly connected to the vehicle and the tablet, the VCI status button on the bottom bar of the screen will display a green badge at the corner, indicating the tablet is ready to start vehicle diagnosis.